

# Report on Ohm's Law, I and II Kirchhoff's Law

Ashish Pundir

to

Mgr inz. Amadeusz Gasiorek, MSc. Dominik Matecki

Electrical engineering and electronics

Laboratory [LAB], group no. 4

4th Semester


Summer semester 2023/2024

March 2024



Poznan University of Technology

• FACULTY OF ENGINEERING MANAGEMENT

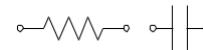

## Exercise - 0

# Ohm's Law, I and II Kirchhoff's Law

## Table of Contents

<b>1 Purpose of the exercise</b>	<b>2</b>
<b>2 The course of the exercise</b>	<b>2</b>
2.1 Ohm's Law . . . . .	2
2.2 The resultant resistance. . . . .	2
2.3 Voltage divider . . . . .	3
2.4.1 I Kirchhoff's law. . . . .	3
2.4.2 II Kirchhoff's law. . . . .	4
<b>3 Report</b>	<b>5</b>
<b>4 Necessary equipment</b>	<b>5</b>
<b>Protocol</b>	<b>6</b>
Results of measurements and calculations . . . . .	6
Characteristics . . . . .	6
Sample calculations . . . . .	6

# 1 Purpose of the exercise

Learning Ohm's law and Kirchhoff's laws I and II.

## 2 The course of the exercise

### 2.1 Ohm's law

Use the development board to check the correctness of Ohm's law. To connect the system, select one resistor from R1, R2, R3 and one from R4, R5, R6. By changing the supply voltage from 0V to 10V in 1V steps, measure the supply current.

- Measure and analytically calculate the resultant resistance of the tested circuit
- Carry out the measurements for two different variants of resistance.
- Compare the measurements with the analytical calculations and if they differ, explain it.
- Draw the current-voltage characteristics of the tested systems.

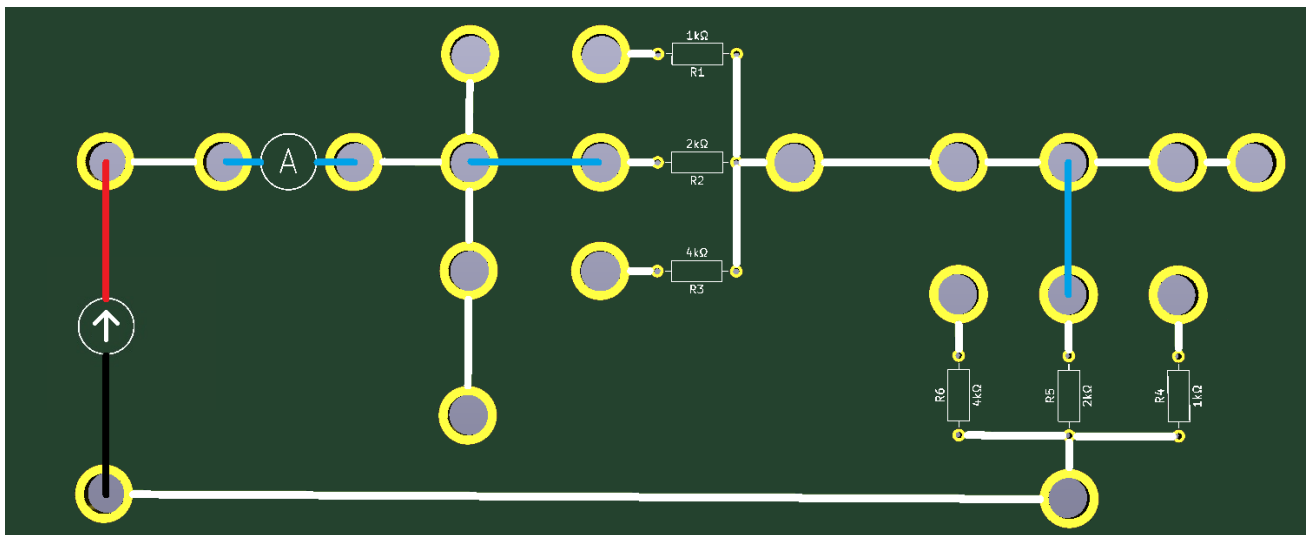


Figure 1: Example of connection implementation - Ohm's law

### 2.2 The resultant resistance

Use the development board to check the correctness of calculation of the resultant circuit resistance. Six resistors are available to choose, which give 56 possible different combinations.

- Choose 5 combinations.
- Calculate analytically and measure the resultant circuit resistance for each combination.
- Compare the measurements with the analytical calculations and if they differ, explain it.

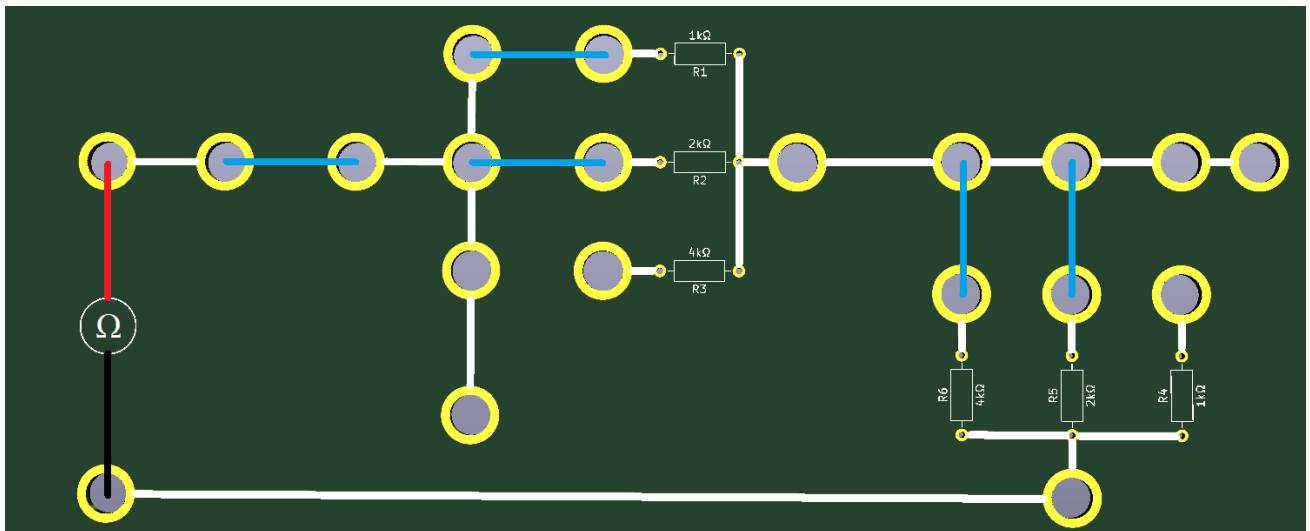
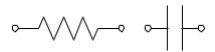


Figure 2: Example of connection implementation - resultant resistance

## 2.3 Voltage divider

Use the development board to check the correctness of the voltage calculation in the voltage divider. The system should be powered by 5V. Six resistors are available to choose, which give 9 connection possibilities (parallel connections are not considered).

- Choose 3 combinations.
- For each combination, calculate analytically the voltage across R4, R5 or R6 (depending on your choice), then measure this voltage.
- Compare the measurements with the analytical calculations and if they differ, explain it.

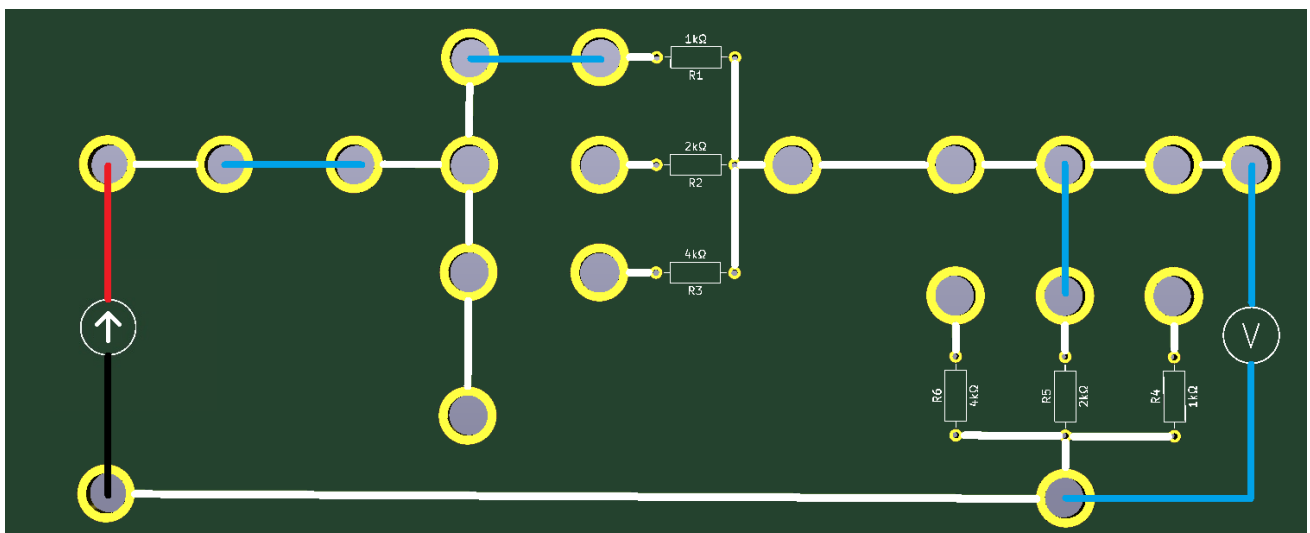


Figure 3: Example of connection implementation - voltage divider

### 2.4.1

## I Kirchhoff's law

Use the development board to check the correctness of I Kirchhoff's laws. The system should be powered by 5V. The resistances R4, R5, R6 should be shorted by a wire.

- Make measurements for three cases, i.e. with only R1; with R1 and R2; and with R1, R2 and R3.

- Measure the current flowing into the node (supply current) and the current flowing from the node (resistance currents  $R_1$ ,  $R_2$ ,  $R_3$ ).
- Compare the measurements with the analytical calculations and if they differ, explain it.

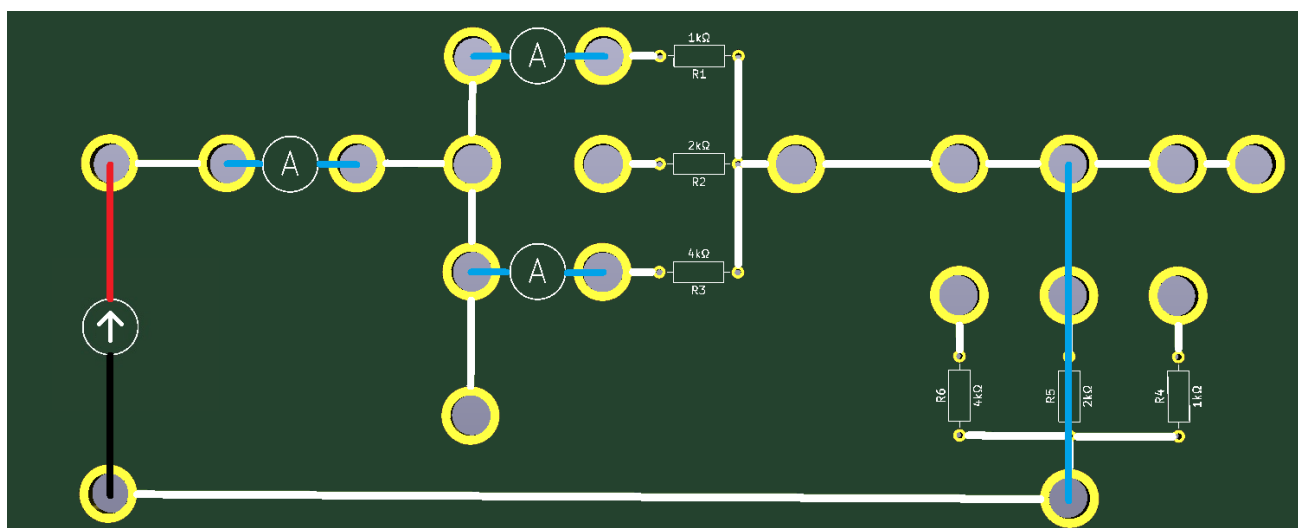


Figure 4: Example of connection implementation – I Kirchhoff's law

## 2.4.2

### II prawo Kirchhoffa

Use the development board to check the correctness of II Kirchhoff's laws. The system should be powered by 5V.

- Select one resistor from  $R_1$ ,  $R_2$ ,  $R_3$  and one from  $R_4$ ,  $R_5$ ,  $R_6$  and measure the voltages on them.
- Take measurements for three different combinations.
- Compare the measurements with the analytical calculations and if they differ, explain it.


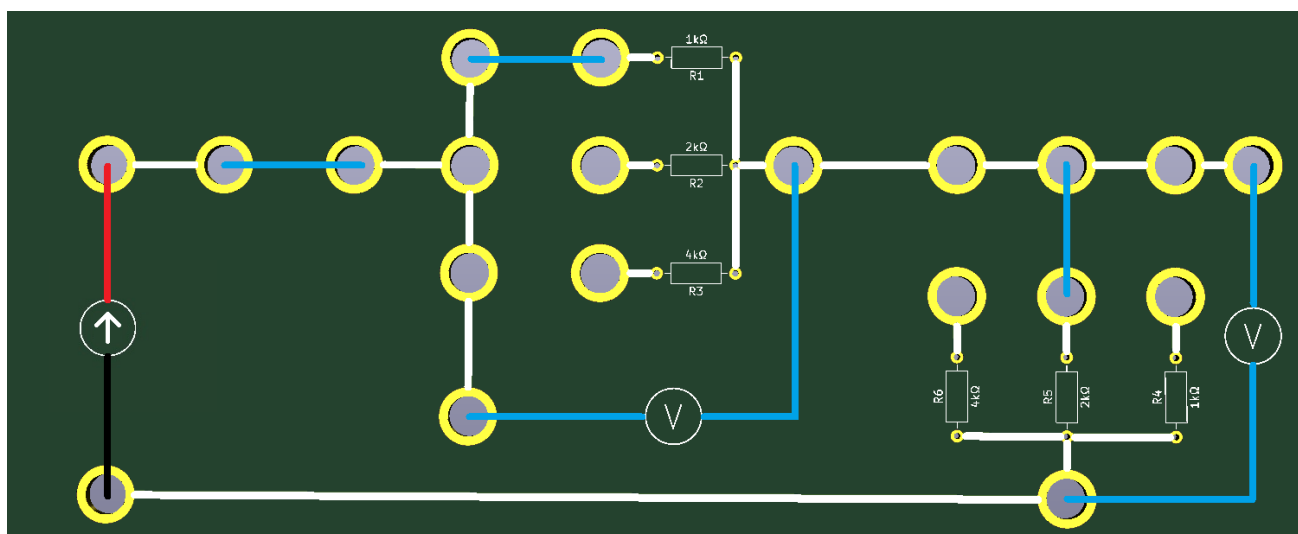


Figure 5: Example of connection implementation - II Kirchhoff's law

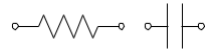

### 3 Report

The report should include:

- results of measurements and calculations
- used formulas and example calculations
- **schematic diagrams** of the tested systems
- current-voltage characteristics
- interpretation of characteristics
- comparison of measurements with analytical calculations

### 4 Necessary equipment

- scientific calculator
- camera for recording waveforms from an oscilloscope
- protocol

Table 1: Measurement and calculation results - Ohm's law

No.	Measurements			Calculations	
	U[V]	Variant 1	Variant 2	Variant 1	Variant 2
		I [mA]	I [mA]	I [mA]	I [mA]
1	0	0	-	0	-
2	1	252	-	0,25	-
3	2	514	-	0,5	-
4	3	771	-	0,75	-
5	4	1,021	-	1	-
6	5	1,281	-	1,25	-
7	6	1,532	-	1,5	-
8	7	1,796	-	1,75	-
9	8	2,048	-	2	-
10	9	2,309	-	2,25	-
11	10	2,567	-	2,5	-

Table 2: Measurement and calculation results - resultant resistance

No.	Measurements	Calculations			
	R [ $\Omega$ ]	R [ $\Omega$ ]			
1	1970	2250			
2	2110	2000			
3	1590	1250			
4	5319	6000			
5	3260	4000			

Table 3: Measurement and calculation results - voltage divider					
No.	Measurements	Calculations			
	UIN [V]	UOUT [V]			
1	3,33	3,3			
2	2,51	2,5			
3	1,645	1,6			

Table 4: Measurement and calculation results - First Kirchhoff's law

No.	Measurements				Calculations
	IIN [mA]	I OUT 1 [mA]	I OUT2 [mA]	I OUT 3 [mA]	$\Sigma$ I OUT [mA]
1	5,038	6	-	-	6
2	7,586	6	3	-	9
3	8,811	7	3	2	11

Table 5: Results of measurements and calculations - II Kirchhoff's law

No.	Measurements			Calculations
	UIN [V]	UOUT 1 [V]	UOUT 2 [V]	$\Sigma$ UOUT [V]
1	5V	3,33	1,68	5,018
2	5V	2,51	2,51	5,02
3	5V	1,648	3,37	5,018

